

### PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Inverted Screw M5x22 T	1	13-9	Primary Planetary Gear	3
2	Chuck	1	13-10	Motor Gear	1
3	Torque Sleeve (18+1)	1	14	Gearbox Housing	1
4	4# Tuning Fork	1	15	Output Shaft	1
5	Circlip	1	16	Gasket	1
6	Gasket	2	17	Ring Gear Side Pin	2
7	Steel Ball	14	18	Variable Speed Pin	4
8	Inside Thread	1	19	Variable Speed Support	1
9	3# Torque Spring	1	20	Gasket	1
10	Torque Gasket	1	21	Motor Cover	1
11	Steel Ball	6	22	Mechanism Screw M3x6	2
12	Cylindrical Pin	6	23	Motor	1
13	7# Powder Metallurgy Assembly	1	24	Push Rod	1
13-1	Shaft Sleeve	1	25	Variable Steel	1
13-2	Ring Gear	1	26	Variable Speed Button	1
13-3	Third Stage Planetary Gear	5	27	Variable Speed Button Spring	1
13-4	Second Stage Planetary Carrier	1	28	Variable Speed Button Spring	1
13-5	Second Stage Planetary Gear	5	29	Housing	1
13-6	Toggle Ring Gear	1	30	Tapping Screw	9
13-7	Compensating Ring Gear	1	31	Switch Assembly	1
13-8	Primary Planetary Support	1	32	Sheet Metal	2

### ASSEMBLY DIAGRAM

