

PARTS LIST

part	Description	Qty	part	Description	Qty
1	Bearing cover	1	31	Coulisse1	1
2	Screw ST5X55	4	32	Locating pin	1
3	Parallel key	1	33	cable	1
4	Spindle	1	34	Screw	12
5	Bail ϕ 5	1	35	bottom handle	1
6	Spring	1	36	speed adjuster	1
7	Pivot1	1	37	top handle	1
8	Pivot	1	38	Switch	1
9	Lever	1	39	Cable sleeve	1
10	Screw ST4X14	2	40	Screw	2
11	Bearings 698	1	41	cable plate	1
12	Countershaft	1	42	spring	2
13	Hemicycle key2.5X3.7X10	1	43	Capacitance	1
14	Motor gear	1	44	Screw	6
15	Safety ring	1	45	Stator	1
16	bearing	1	46	label	1
17	bearing	1	47	motor cover	1
18	Safety ring	1	48	label	1
19	Safety ring	1	49	Carbon brush	2
20	Spindle double gear	1	50	Brush holder	2
21	bearing	1	51	Brush holder cover	2
22	Locating pin	2	52	Screw	1
23	Gear box	1	53	soft start	2
24	Seal ring	1	54	Rear cover	1
25	bearing	1	55	Screw	4
26	rotor	3	56	spanner	1
27	Bearing	1	57	mixing paddle	1
28	bearing cover	1	58	Screw	1
29	Coulisse2	1	59	self-locking dust jacket	1
30	Spring	2	60	Switch dust jacket	1

ASSEMBLY DIAGRAM

