

PART LIST

No.	Description	No.	Description
1	Tapping Screw	2_21	Bearing
2	head shell assembly	2_22	Cross recessed pan head screw
2_1	Upper press plate	2_23	Connecting shaft
2_2	Down press plate	2_24	drive plate
2_3	grinding wheel guard	3	MOTOR
2_4	Screw	4	spring lock washers
2_5	Front cover	5	Machine screw
2_6	Output shaft	6	sensitive switch(dust proof
2_7	woodruff key	7	PCB+Motor assembly
2_8	Bearing	8	spring
2_9	Cross recessed pan head screw	9	Switch the push rod
2_10	gear	10	Switch push button
2_11	Circlips for shaft	11	Shell
2_12	needle bearing	12	Tapping Screw
2_13	head shell	13	Dust Screen
2_14	split baffle ring	14	Stents
2_15	self-locking spring	15	Battery pack(not included)
2_16	self-locking button	16	Tapping Screw
2_17	oil-retaining bearing	17	protective guard
2_18	Circlips for shaft	18	Nameplate
2_19	woodruff key	19	Auxiliary handle
2_20	small gear	20	Spanner

ASSEMBLY DIAGRAM

