

PARTS LIST

No.	Description	No.	Description
1	duct button spring	40	push plate sealing ring
2	switch trigger 'torsional spring	41	push plate fixed screw
3	gear case	42	tapping screw
3-1	Hinge spindle location pin	43	impact block cover
4	locknut	44	impack block
5	bearing	45	protection board
6	screw	46	tapping screw
7	output shaft gear	47	gear case cover
8	fuel tank cap	48	split washer
9	fuel tank cap sealing ring	49	flat washer
10	shaft sleeve	50	brake pick
11	pothook	51	brake pick torsional spring
12	barking torsional spring	52	rubber ring
13	output shaft	53	tapping screw
14	transparency oil tube	54	plinth
15	fuel tank	55	transparency oil tube
16	fuel tank sealing ring	56	oil pump subassembly
17	breather value	56-1	oil pump
18	tapping screw	56-2	piston bush
19	filtration spring	56-3	worm gear
20	bearing	56-4	worm
21	left decoration cover	56-5	worm tooth
22	holddown spring	57	tapping screw
23	chainwheel	58	microswitch
24	split washer	59	brush motor
25	tapping screw	60	left decoration cover
26	sealing ring	61	tapping screw
27	heat insulation washer	62	motor cover
28	tapping screw	63	tapping screw
29	right housing cover	64	tapping screw
29-1	bearing insert	65	handle
29-2	outer hexagon bolt	66	brake spring
30	tapping screw	67	controller
31	dead block	68	connect wire
32	blade cover	69	plug in socket
33	holddown rotary knob	70	left housing cover
33-1	holddown rotary knob insert	71	connect wire
34	adjusting knob	72	connect wire
35	adjusting end cover	73	microswitch
36	circlip for shaft	74	motor gear
37	Spiral wheel assembly	75	switch trigger
38	chain	76	push block
39	chain plate		

ASSEMBLY DIAGRAM

