

PARTS LIST

No.	Description	No.	Description
1	Front cover	14	Screw
2	Insulation ring	15	Fixing plate
3	Nozzle	16	Dial
4	Sealing ring	17	Trigger
6	Heat pipe	18	Extension spring
6	Blocking unit	19	Housing Assembly
7	Circlip	20	Plug-in seat
8	Connection sleeve	21	PTC
9	Fastening spring	22	EATON
10	Rubber ring	23	Leading wire
11	Bracket	24	On-off switch
12	Lock hook	25	Housing Assembly
13	Link	26	Screw

ASSEMBLY DIAGRAM

