

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	tapping screw	12	37	connecting rod	1
2	wire fixed cover	1	38	tension spring	1
3	tapping screw	6	39	connecting rod	1
4	left handle fixed holder	1	40	tension spring pressing plate	1
5	right handle fixed holder	1	41	tapping screw	2
6	tapping screw	4	42	pressing plate	1
7	wire pressing plate	2	43	tapping screw	2
8	wire	1	44	rotation axis	1
9	back wheel cover	2	45	split pin	1
10	split pin	2	46	washer	1
11	washer	2	47	locating pin	1
12	washer	2	48	fixed holder	1
13	back wheel	2	49	split pin	1
14	back wheel axle	1	50	washer	1
15	wheel axle cover	2	51	tension spring	1
16	tapping screw	1	52	eight adjustment lever	1
17	pressing plate	2	53	screw	2
18	blanking cap	1	54	adjusting handle	1
19	out of grass cover	1	55	Connecting rod baffle board	1
20	tapping screw	5	56	tapping screw	1
21	knife holder	1	57	balance weight sandbag	1
22	blade	1	58-1	The back cover	1
23	bolt	1	58-2	Back cover axle	1
24	pressing plate	1	58-3	Tension spring	1
25	tapping screw	2	58-4	Upper cover	1
26	front wheel axle	1	58-5	Transparent cover swivel pin	2
27	front wheel	2	58-6	Transparent cover torsional spring	1
28	wheel axle cover	2	58-7	Reverse self-locking button spring	1
29	washer	2	58-8	Transparent cover	1
30	washer	2	58-9	Nut	2
31	split pin	2	58-10	Dust pad	1
32	front wheel cover	2	58-11	Adjust the high position board	1
33	floor' deck	1	58-12	Bolt	2
34	split pin	2	58-13	Upper cover handle	1
35	washer	2	58-14	Tapping screw	4
36	locating pin	2			

PARTS LIST

No.	Description	Qty	No.	Description	Qty
59-1	Push rod cover	1	60-1	Handle for grass box	1
59-2	Trigger	1	60-2	Grass box display plate	1
59-3	Tapping screw	1	60-3	Upper cover for grass box	1
59-4	Limit stop collar	1	60-4	Holder for grass box	1
59-5	Upper push rod	1	60-5	Pressing plate	2
59-6	Tapping screw	4	60-6	Tapping screw	2
59-7	Left cover for switch box	1	60-7	Straw bag	1
59-8	Spring	1	61-1	brushless motor	1
59-9	Microswitch	1	61-2	tapping screw	5
59-10	Decorate cover	1	61-3	gear case	1
59-11	Trigger tension spring	1	61-4	tapping screw	4
59-12	Cable clip	1	61-5	bearing	1
59-13	Wire	1	61-6	snap ring	1
59-14	Wire pressing plate	1	61-7	gear	1
59-15	Tapping screw	2	61-8	woodruff key	1
59-16	Locking press-button	1	61-9	output shaft	1
59-17	Right cover for switch box	1	61-10	bearing	1
59-18	Quick clamp handle	1	61-11	gear case	1
59-19	Connect pin	1	61-12	tapping screw	4
59-20	Quick clamp pressing plate	1	61-13	brushless controller	1
59-21	Bolt	1	61-14	fixed seat	2
59-22	Cable clip	1	61-15	tapping screw	2
59-23	Lower push rod	1	62-1	tapping screw	2
59-24	Quick clamp handle	1	62-2	cover of Key	1
59-25	Connect pin	1	62-3	micro switch	1
59-26	Bolt	1	62-4	key	1
59-27	Pressing plate	1	62-5	Anti-drop tape	1
59-28	Adjusting cover	1	62-6	tapping screw	5
59-29	Adjusting cover	1	62-7	Right battery compartment	1
59-30	Pressing plate	1	62-8	Right battery holder	1
59-31	Bolt	1	62-9	Transfer plate assembly	1
59-32	Connect pin	1	62-10	left battery holder	1
59-33	Quick clamp handle	1	62-11	tapping screw	2
59-34	Bolt	1	62-12	left battery compartment	1
59-35	Pressing plate	1	62-13	tapping screw	1
59-36	Connect pin	1			
59-37	Quick clamp handle	1			
59-38	Bolt	3			
59-39	Limit stop collar	1			
59-40	Tension spring	1			
59-41	Left cover 'limit stop collar	1			
59-42	Limit stop collar	1			
59-43	Tapping screw	1			

ASSEMBLY DIAGRAM

