

PARTS LIST

Part	Description	Qty
1	Screw ST4×16	13
2	Right handle	1
3	Allen 4	1
4	Cable	1
5	Cable jacket	1
6	Screw ST4×14	2
7	Strain relief	1
8	Left handle	1
9	Capacitor	1
10	Switch	1
11	Carbon brush holder	2
12	Carbon brush	2
13	Carbon brush cover	2
14	Housing	1
15	Stator	1
16	Screw ST4×45	2
17	Wind-proof circle	1
18	607 bearing cover	1
19	607Z (B) bearing	1
20	Rotor	1
21	Screw M5×8	4

Part	Description	Qty
22	6000RS bearing	2
23	Lock spring	2
24	Gear box	1
25	Steel jacket	1
26	Spindle	1
27	Steel jacket	1
28	Big gear	1
29	Pin	1
30	Needle bearing	1
31	Reciprocating lever	1
32	Sliding block	1
33	Pin	2
34	Slide wedge	2
35	Screw M5×12	4
36	Plastic cover	1
37	Screw M4×14	4
38	Left gear box cover	1
39	Screw ST4×18	4
40	Right gear box cover	1
41	M5×12 Screw	2
42	Blade holder system	1

ASSEMBLY DIAGRAM

