

PARTS LIST

Part	Description	Qty
1	NAME LABE	1
2	HEAD COVER BODY	1
3	SCREW M8×16	1
4	WASHER 8	1
5	OUTER FLAGE	1
6	CLAMPING FLAGE	1
7	SCREW M4×10	6
8	FLAGE FOR LOWER GUARD	1
9	LOWER GUARD	1
10	SCREW M4×8	3
11	SPANNER FOR LOWER GUARD	1
12	SPRING $\Phi 3.8 \times \Phi 0.7 \times 98$	1
13	OUTPUT SHAFT	1
14	SEMI-CIRCLE KEY 3×10	1
15	BEARING 6001-2RS	1
16	FRONT COVER	1
17	SHAFT CIRCLIP 12	1
18	BIG GEAR	1
19	SHAFT CIRCLIP 10	1
20	BOLT M6×16	1
21	OIL BEARING 8C7×14×8	1
22	SCREW M5×18	1
23	POSITIONING CIRCLIP	1
24	ELASTIC CYLINDRICAL PIN 6×35	1
25	HEAD COVER	1
26	SCREW M4×14	3
27	SCREW M5×35	1
28	WINDSHIELD	1
29	SELF-LOCKING PIN	1
30	BEARING 6000-2RS	1
31	SPRING $\Phi 5.9 \times \Phi 0.7 \times 10$	1
32	ROTOR	1
33	WIND LOOP	1
34	SCREW ST4.2×60-F	2
35	STATOR	1
36	SQUARE SHAPE CONNECT PIECES 8.5	2
37	BEARING 607-2RS	1
38	BEARING JACKET	1
39	HOUSING	1

Part	Description	Qty
40	RATING LABE	1
41	CARBON BRUSH COVER	2
42	CARTON BRUSH	2
43	CARBON BRUSH HOLDER	2
44	REAR COVER	1
45	SCREW ST4.2×14-F	9
46	SCREW M5×50	2
47	LEFT HANDLE	1
48	SWITCH	1
49	RIGHT HANDLE	1
50	CABLE CLAMP	1
51	CABLE JACKET	1
52	CABLE	1
53	SCREW 5X7	2
54	LOCKING KNOB	1
55	FLAT WASHER $\Phi 6 \times \Phi 14 \times 1.5$	2
56	ANGLE FRAME	1
57	NUT M 4	1
58	SCREW M4×12	1
59	SPRING $\Phi 8.2 \times \Phi 0.8 \times 3$	1
60	PRESSING LOCK	1
61	BOLT M6×14	1
62	PLATE	1
63	SPANNER FOR DEPTH	1
64	DEPTH ADJUSTING LOCK ROD	1
65	DEPTH ADJUSTING FRAME	1
66	LASER SWITCH	1
67	BATTERY SPRING	2
68	BATTERY INSERT	2
69	LASER PLASTIC COVER	1
70	RUBBER COLUMN8×5	1
71	LASER HOUSING	1
72	LASER POSITION BALL	1
73	SHOT	1
74	HEX WRENCH 6	1
75	GUIDE	1
501	LASER ASSEMBLY	1
502	UPPER ASSEMBLY	1

ASSEMBLY DIAGRAM

