

PARTS LIST

Part	Description	Qty
1	Arbor Bolt	1
2	Flange Washer	1
3	Outer Flange	1
4	Cutting Wheel (sold separately)	-
5	Wrench	1
6	Rubber Foot	4
7	Base	1
8	Nut	4
9	Vice Stand	1
10	Washer	5
11	Standard Spring Washer	3
12	Hexagon Bolt	2
13	Vise Handle	1
13.1	Screw	1
13.2	Rocking Bar	1
13.3	Cap Of Rocking Bar	1
13.4	Spring Washer	1
14	Hatch Pin	2
15	Small Clamping Plate	1
16	Vice Column Pin	1
17	Cap Of Brush Holder	2
18	Carbon Brush	2
19	Brush Holder	2
20	Rear Cover	1
21	Cross Screw	2
22	Cross Screw	2
23	Cross Screw	1
24	Standard Spring Washer	1
25	Housing	1
26	Stator	1
27	Bearing	1

Part	Description	Qty
28	Rotor	1
29	Standard Spring Washer	6
30	Cross Screw	2
31	Switch	1
32	Trigger	1
33	Cross Screw	2
34	Up-Handle	1
35	Cross Screw	2
36	Cross Screw	1
37	Cross Screw	2
38	Left Lifting Handle	1
39	Cross Screw	2
40	Cord Anchorage	1
41	Cord Armor	1
42	Cable Wire	1
43	Right Lifting Handle	1
44	Hexagon Nut	3
45	Down-Handle	1
46	Cross Screw	6
47	Anti-Wind Ring	1
48	Bearing	1
49	Gear Box	1
50	Fixed Guard	1
51	Cross Screw	4
52	Swing Guard	1
53	Swing Guard Screw	2
54	Spindle	1
55	Semicircle Key	1
56	Bearing	1
57	Spring of Lock Pin	1
58	Spindle Lock	1
59	Bearing Holder	1
60	Gear	1

Part	Description	Qty
61	Spring Washer	1
62	Bearing	1
63	Circumgrate Pin	1
64	Cross Screw	1
65	Washer	1
66	Standard Spring Washer	1
67	Dust Board	1
68	Big Spring	1
69	Hexagon Nut	1
70	Depth Adjustment Bolt	1
71	Pipe	1
72	Height Limited Pin	1
73	Type "O" Ring	1
74	Lock Cap	1
75	Hexagon Nut	1
76	Hexagon Screw	
77	Bolt	2
78	Standard Spring Washer	2
79	Washer	2
80	Angle Scale	1
81	Springiness Column Pin	1
82	Quick Release	1
83	Fastener	3
84	Hexagon Nut	2
85	Cross Screw	3
86	Cover Protector	1
87	Cross Screw	2
88	Cover Of Column Pin	1
89	Washer	2
90	Cross Screw	2
91	Inner Flange	1

ASSEMBLY DIAGRAM

